


# SERVICE MANUAL

INTEGRATED STEREO AMPLIFIER

**SANSUI AU-9900A/11000A**

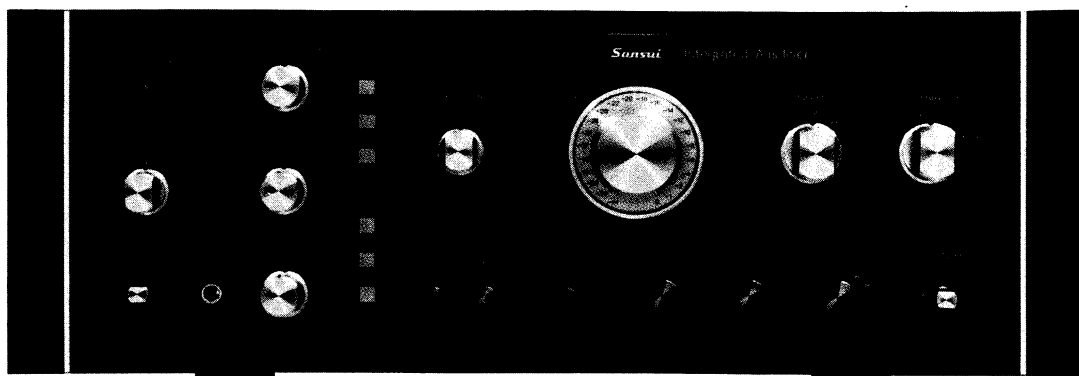


*Sansui*

SANSUI ELECTRIC CO., LTD.

# TABLE OF CONTENTS

Section	Title	Page
1.	<b>BLOCK DIAGRAM</b>	<b>1</b>
2.	<b>SPECIFICATIONS</b>	<b>2</b>
3.	<b>PARTS LOCATION &amp; PARTSLIST</b>	<b>3</b>
3- 1.	F-2569 Input Terminal & Switch Board	3
3- 2.	F-2660 Level Volume Circuit Board	3
3- 3.	F-2691 Equalizer Circuit Board	4
3- 4.	F-2573 Filter Accessory Circuit Board	4
3- 5.	F-2577 Treble Tone Selector Circuit Board	5
3- 6.	F-2578 Bass Tone Selector Circuit Board	5
3- 7.	F-2571 Tape Copy & Tuner Signal Switching	5
3- 8.	F-2572 Tape Play Circuit Board	5
3- 9.	F-2575 Midrange Tone Control	6
3-10.	F-2579 Pre-Main Switch Circuit board	6
3-11.	F-2576 Bass & Treble Tone Control Circuit Board	6
3-12.	F-2581 Final Stage Circuit Board	6
3-13.	F-2661 Driver Circuit Board	7
3-14.	F-2629 Power Supply Circuit Board	7
3-15.	F-2630 Power Supply Circuit Board for Driver Stage	8
4.	<b>OTHER PARTS</b>	<b>9</b>
4- 1.	Top & Bottom View	9
4- 2.	Exploded View	10
5.	<b>ADJUSTMENTS</b>	<b>11</b>
5- 1.	Bias Current Adjustment	11
6.	<b>SCHEMATIC DIAGRAM</b>	<b>12</b>
6- 1.	AU-9900A/11000A Pre AMP. Section	12
6- 2.	AU-9900A Power AMP. Section	13
6- 3.	AU-11000A Power AMP. Section	14
6- 4.	AU-9900A Power Supply Section	15
6- 5.	AU-11000A Power Supply Section	15
7.	<b>PACKING LIST</b>	<b>back cover</b>
8.	<b>ACCESSORY PARTS LIST</b>	<b>back cover</b>

# 1. BLOCK DIAGRAM

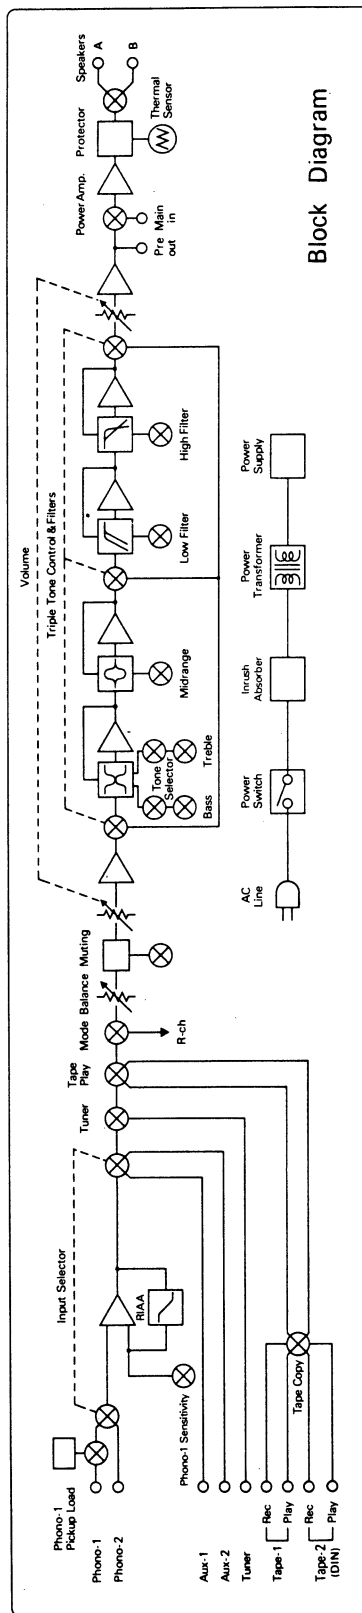

## 2. SPECIFICATIONS

### POWER OUTPUT

Min. RMS, both channels driven, from 20 to 20,000Hz, with no more than 0.05% total harmonic distortion

AU-9900A	}	80 watts per channel into 8 ohms
		80 watts per channel into 4 ohms
		Min. RMS, both channels driven, at 1,000 Hz with no more than 0.05% total harmonic distortion
		80 watts per channel into 8 ohms
AU-11000A	}	80 watts per channel into 4 ohms
		110 watts per channel into 8 ohms
		110 watts per channel into 4 ohms
		Min RMS, both channels driven at 1,000 Hz, with no more than 0.05% total harmonic distortion
AU-11000A	}	110 watts per channel into 8 ohms
		110 watts per channel into 4 ohms

LOAD IMPEDANCE ..... 4.8 ohms (SYSTEM-A or B)  
8 ohms (SYSTEM A+B)

POWER BANDWIDTH..... 20 to 20,000 Hz at or below rated min. RMS power output and total harmonic distortion

TOTAL HARMONIC DISTORTION ..... less than 0.05% at or below rated min. RMS power output

INTERMODULATION DISTORTION (70Hz:7kHz=4:1 SMPTE method) ..... less than 0.05%

FREQUENCY RESPONSE (at 1 watt) ..... 5 to 80,000 Hz  $\pm 0_{-1.5}$  dB

DAMPING FACTOR..... approximately 70 at 8 ohm load

RIAA CURVE DEVIATION (PHONO) ..... +0.2dB, -0.2dB (30 Hz to 15 kHz)

INPUT SENSITIVITY AND IMPEDANCE (1 kHz, for rated power output)

PHONO-1 ..... 2, 4, 8 mV/30, 50, 100 kilohms (Max. input capability: 1,000 mV at 1 kHz, less than 0.1% total harmonic distortion and PHONO-1 SENSITIVITY switch at 8 mV)

PHONO-2 ..... 2 mV/50 kilohms (Max. input capability: 250 mV at 1 kHz, less than 0.1% total harmonic distortion)

AUX-1, 2 TAPE ..... 150 mV/50 kilohms

OUTPUT LEVEL (1,000 Hz)

TAPE-1, 2 REC (pin jacks) ..... 150 mV/560 ohms

TAPE-2 REC/PLAY (DIN socket)... 30 mV/70 kilohms

PRE OUT ..... 1 V/560 ohms

CHANNEL SEPARATION (1 kHz, at rated power output)

PHONO-1, 2 ..... better than 60dB

AUX-1, 2 ..... better than 60dB

HUM AND NOISE (short-circuit, A-network)

PHONO-1 ..... 75dB (PHONO-1 SENSITIVITY Switch at 4 mV)

AUX-1, 2 ..... better than 90 dB

### CONTROLS

BASS.....  $\pm 10$ dB (30 Hz)  
Tone selector (turnover frequency) ..... 150, 300, 600 Hz

MIDRANGE .....  $\pm 5$ dB (1 kHz)

TREBLE .....  $\pm 10$ dB (20 kHz)  
Tone selector (turnover frequency) ..... 2, 4, 8 kHz

LOW FILTER ..... -3dB (20, 60 Hz), 12dB/oct.

HIGH FILTER ..... -3dB (7 kHz), 6dB/oct.  
-3dB (12 kHz), 12dB/oct.

MUTING ..... -20dB

### POWER REQUIREMENTS

POWER VOLTAGE ..... 100, 120, 220, 240V (50/60Hz)  
120V (Usable 110-130V)  
60Hz (for U.S.A. & Canada only)

### POWER CONSUMPTION

Maximum consumption

AU-9900A ..... 665 watts

AU-11000A ..... 915 watts

Rated consumption

AU-9900A ..... 340 watts 435 VA


AU-11000A ..... 480 watts 605 VA

DIMENSIONS..... 460 mm (18 1/8") W  
176 mm (6 15/16") H  
407 mm (16 1/16") D

### WEIGHT

AU-9900A { ..... 17.6 kg (38.8 lbs) net  
..... 19.7 kg (43.4 lbs) packed

AU-11000A { ..... 19.2 kg (42.3 lbs) net  
..... 21.3 kg (47.0 lbs) packed

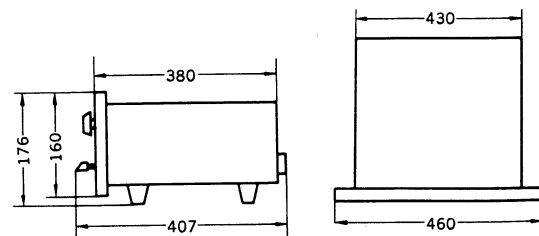

\* Design and specifications subject to change without notice for improvements.


\* In order to simplify the explanation illustrations may sometimes differ from the originals.

### 3. PARTS LOCATION & PARTS LIST

#### 3-1. F-2569 Input Terminal & Switch Circuit Board

AU-9900A (Stock No. 7594631) AU-11000A (Stock No. 7594731)

Conductor Side

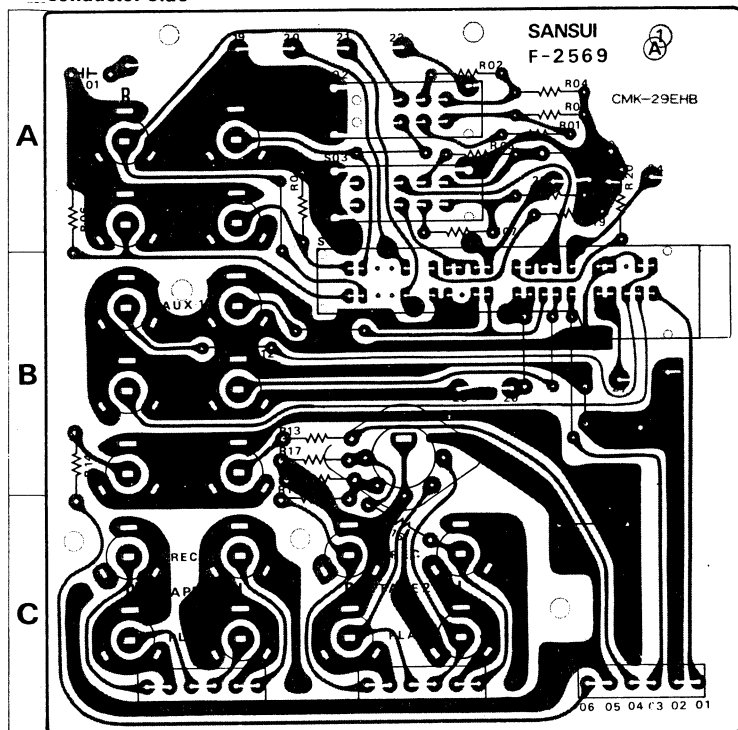


Since some of capacitors and resistors are omitted from parts lists in this Service Manual, refer to the common parts list for capacitors & resistors which was appended previously to each Sansui Manual.

#### Parts List

Parts No.	Stock No.	Description	Position
R07.08	0231202	2.0kΩ 1/2W M.R.	A
S01	1190260	Input Selector Switch	A, B
S02	1110310	Pick-up Load Switch	A
S03	1110310	Sensitivity Switch	A
J01	2090030	5P DIN Socket	B
	2410780	6P Pin Ass'y (Type C)	
	2430260	1P Jack (White)	
	2430270	1P Jack (Red)	

#### 3-2. F-2660 Level Volume Circuit Board AU-9900A (Stock No. 7594661) AU-11000A (Stock No. 7594761)


Conductor Side

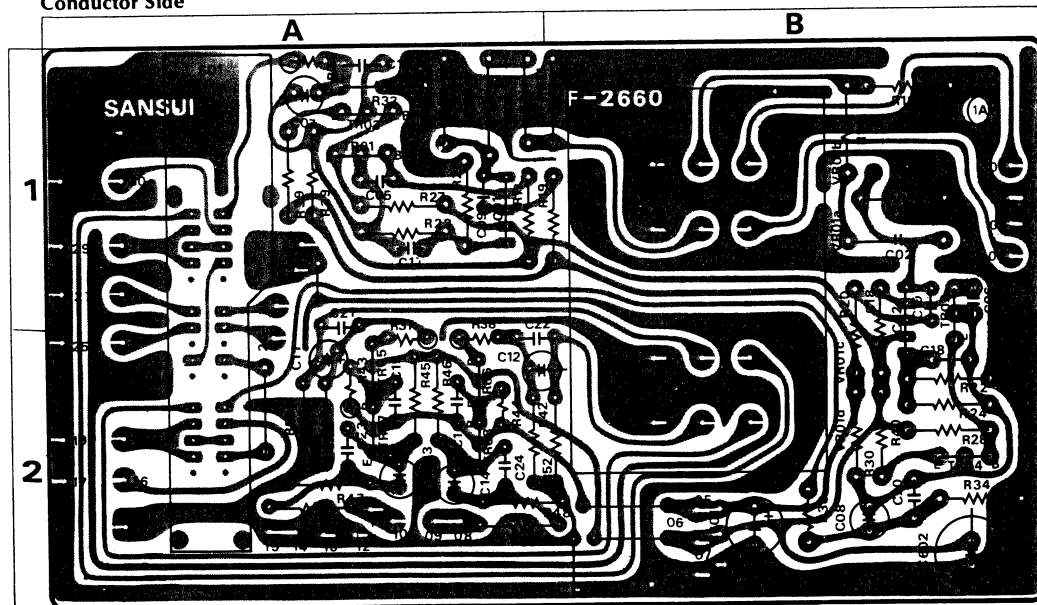

#### Parts List

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR01.02	0306270.1	25C1708 (F, G)	1 A, 1, 2B 1 A, 2 B 2 A	TR07.08	0306360.1	25C1951 (1, 2)	Transistor 2 A	VR01	1090220	100kΩ X 4 Detent Volume	1. 2 A
TR03.04	0306360.1	25C1951 (1, 2)		IC01.02	0360370.1	25A798 (F, G)		S01	1190290	Tone & Filter Switch	
TR05.06	0300470.1	25A726 (F, G)		CO1.02	0602109	1μF 100V M.C.					


**3-3. F-2691 Equalizer Circuit Board** AU-9900A (Stock No. 7551041)  
AU-11000A (Stock No. 7551061)

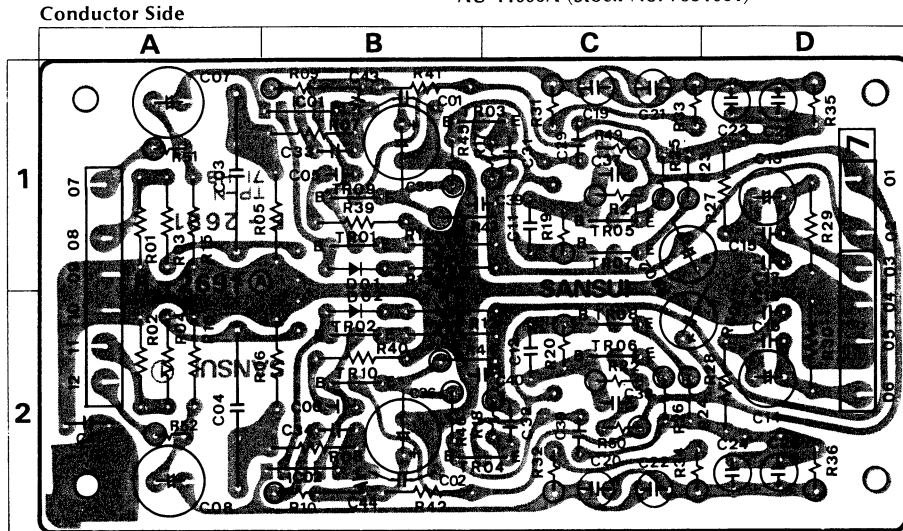

**Parts List**

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR01.02	0306070.1	2SC1313 (F, G)	1 C, 2 C	C03.04	0602229	2.2 $\mu$ F 100VW M.C.	1 D, 2 D	R33.34	0231564	560 $\Omega$	1/2W M.R.
TR03.04	0306270.1	2SC1708 (F, G)	1 B, C	C19.20	0625562	5600pF	1 B, 2 B	R35.36	0231473	47 $\Omega$	
TR05.06	0306270.1	2SC1708 (F, G)	1 B, 2 B	C21.22	0620101	100pF	50V P.C.	R51.52	0231102	1 $\Omega$	
TR07.08	0300710.1	2SA847 (F, G)	1 B, 2 B	C23.24	0625122	1200pF	1 B, 2 B		2410590	4P Pin Ass'y (Type D)	
TR09.10	0306270.1	2SC1708 (F, G)	1 B, 2 B	C25.26	0620391	390pF	50V P.C.	1 A, 2 A	2410600	6P Pin Ass'y (Type D)	
IC01.02	0360370.1	2SA798 (F, G)	1 C, 2 C						2410910	2P Pin Ass'y (Type E)	
D01.02	0311160	1S2473D	Diode	R15.16	0231332	3.3k $\Omega$	1/2W M.R.				
	0311180	1S1588		R31.32	0231223	22k $\Omega$					


**3-4. F-2573 Filter Accessory Circuit Board** AU-9900A (Stock No. 7561671)  
AU-11000A (Stock No. 7561771)

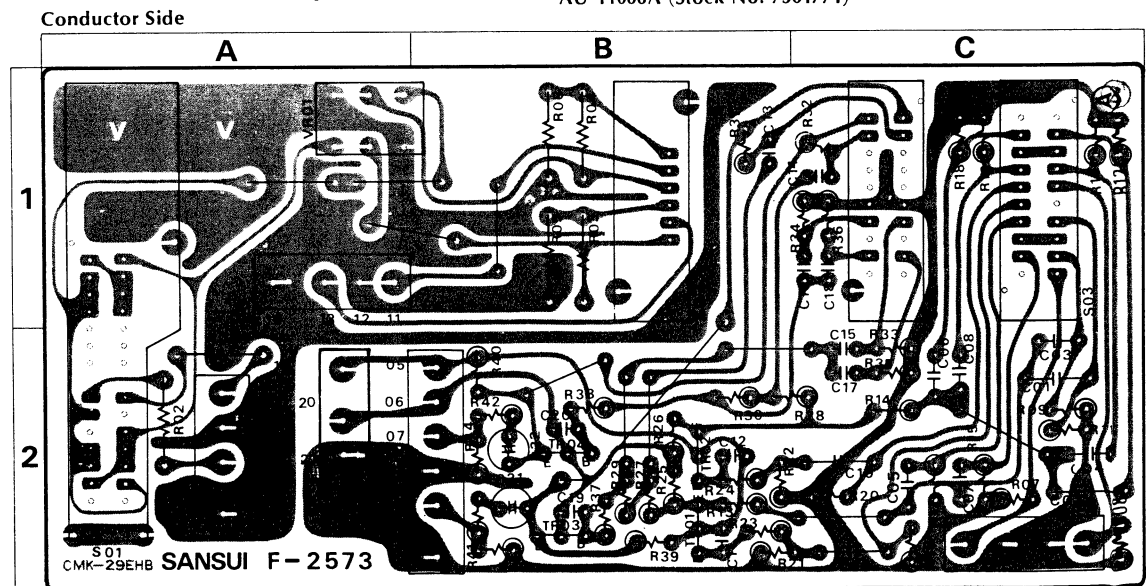

**Parts List**

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR01.02	0306270.1	2SC1708 (F, G)	2 B	VR01	1015170.1	250k $\Omega$ (M, N) Balance Volume	1 A	S03	1170950	Low Filter Switch	1 C
TR03.04	0300760.1	2SA917 (1, 2)	2 B	S01	1190250	Mode Switch	1, 2 A	S04	1170950	High Filter Switch	1 C
				S02	1170770	Muting Switch			2410590	4P Pin Ass'y (Type D)	
C15.16	0620821	820pF 50V P.C.	2 C, 1 C						2410920	3P Pin Ass'y (Type E)	


**3-5. F-2577 Treble Tone Selector Circuit Board** AU-9900A (Stock No. 7561651)  
AU-11000A (Stock No. 7561751)

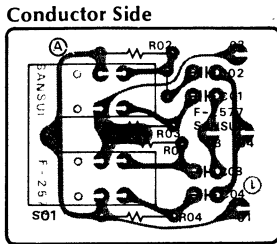

**Parts List**

Parts No.	Stock No.	Description
C01, 02	0620331	330 pF
C03, 04	0620911	910 pF
		50V P.C.
S01	1131150	Treble Tone Push Switch

**3-6. F-2578 Bass Tone Selector Circuit Board** AU-9900A (Stock No. 7561661)  
AU-11000A (Stock No. 7561761)

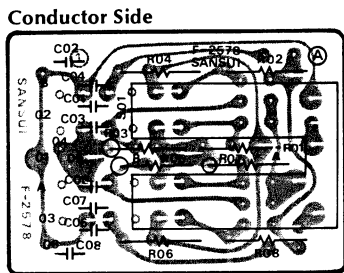


**Parts List**

Parts No.	Stock No.	Description
S01	1131140	Bass Tone Push Switch

**3-7. F-2571 Tape Copy & Tuner Signal Switching Circuit Board**


AU-9900A (Stock No. 7594641) AU-11000A (Stock No. 7594741)

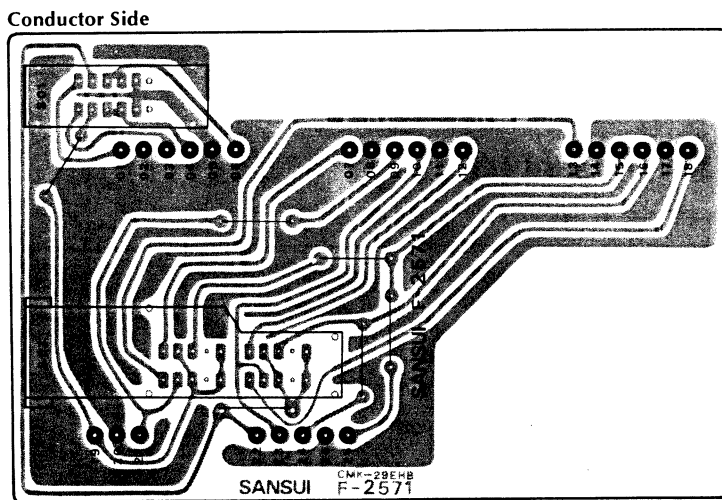

**Parts List**

Parts No.	Stock No.	Description
S01	1170870	Lever Switch, tuner
S02	1190280	Tape Copy Switch

**3-8. F-2572 Tape Play Circuit Board** AU-9900A (Stock No. 7594651)  
AU-11000A (Stock No. 7594751)

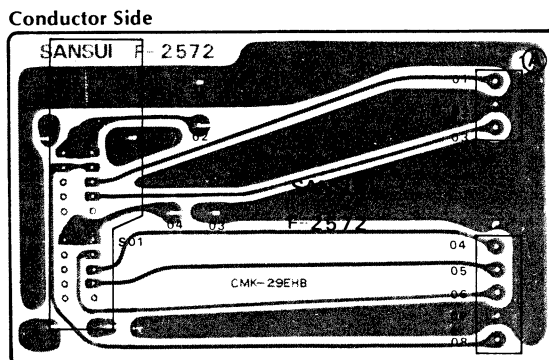


**Parts List**

Parts No.	Stock No.	Description
S01	1190270	Tape Play switch
	2410760	3P Pin Ass'y (Type C)
	2410780	6P Pin Ass'y (Type C)

**3-9. F-2575 Midrange Tone Control Circuit Board**  
 AU-9900A (Stock No. 7561631)  
 AU-11000A (Stock No. 7561731)

Conductor Side

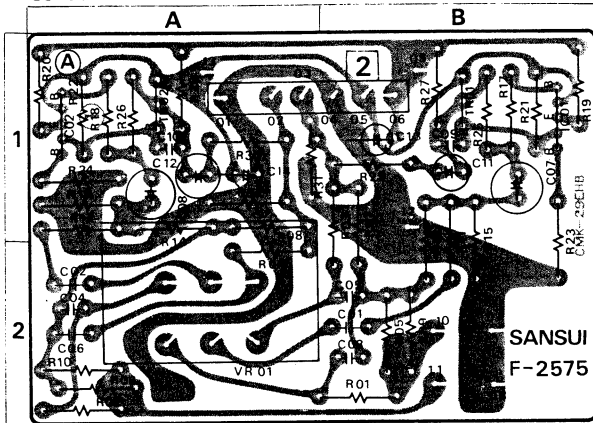


**Parts List**

Parts No.	Stock No.	Description	Position
TR01.02	0306270.1	2SC1708 (F, G) Transistor	2 A, 2 B
IC01.02	0360290.1	25A798 (F, G) IC	2 A, 2 B
VR01	1090150.1	50kΩ (B) × 2 Midrange Volume	1 B
	2410700	6P Pin Ass'y (Type F)	

**3-10. F-2579 Pre-Main Switch Circuit Board**  
 AU-9900A (Stock No. 7594671)  
 AU-11000A (Stock No. 7594771)

Conductor Side

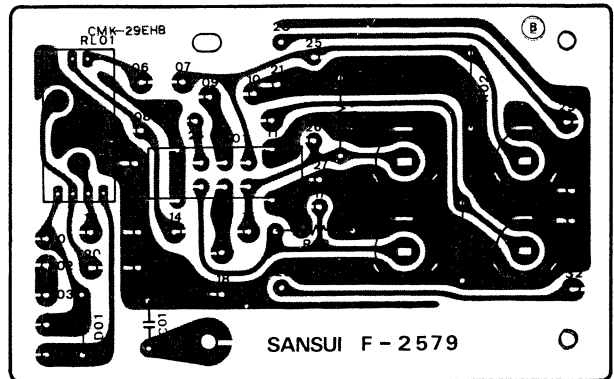


**Parts List**

Parts No.	Stock No.	Description
RL01	1150320	Relay Switch
	2430260	Female Pin Jack (White)
	2430270	Female Pin Jack (Red)
S01	1110320	PRE Main Switch

**3-11. F-2576 Bass & Treble Tone Control Circuit Board**  
 AU-9900A (Stock No. 7561641)  
 AU-11000A (Stock No. 7561741)

Conductor Side

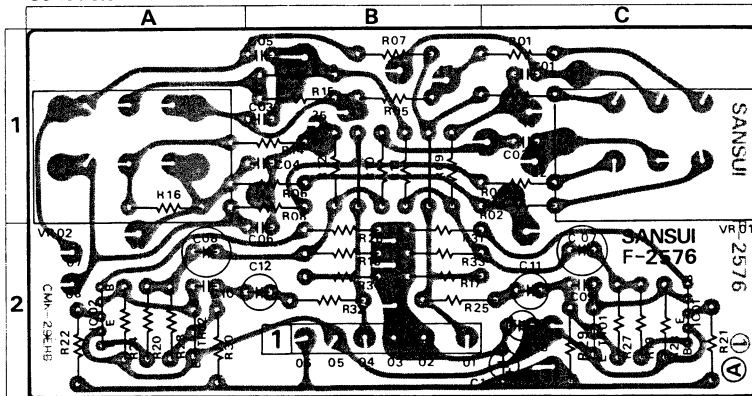


**Parts List**

Parts No.	Stock No.	Description	Position
TR01.02	0306270.1	2SC1708 (F, G) Transistor	2 C, 1 A
IC01.02	0360290.1	25A798 (F, G) IC	2 C, 1 A
C01.02	0620301	300pF 50V P.C.	1 C
VR01	1090150.1	50kΩ (B) × 2 Treble Volume	1 C
VR02	1090150.1	50kΩ (B) × 2 Bass Volume	1 A
	2410680	4P Pin Ass'y (Type F)	

**3-12. F-2581 Final Stage Circuit Board**  
 +Side { AU-9900A (Stock No. 7571531)  
 AU-11000A (Stock No. 7571571)  
 -Side { AU-9900A (Stock No. 7571581)  
 AU-11000A (Stock No. 7571601)

Conductor Side

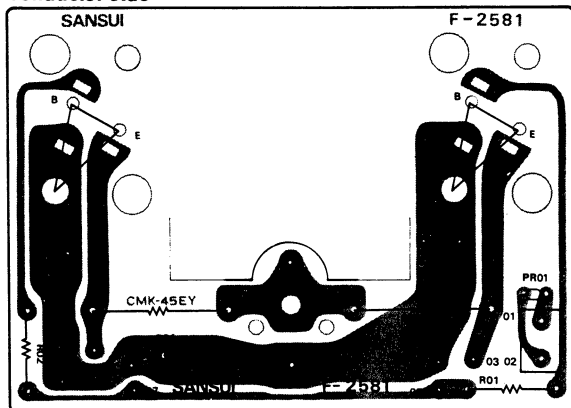

**Parts List (+ Side)**


Parts No.	Stock No.	Description
TR01	0306451.2	25C1403A (O, Y) Transistor
TR02	0306451.2	25C1403A (O, Y) Transistor
R01.02	0192829	8.2Ω 1/2W F.R.
R03.04	0135338	0.33Ω 5W Ce.R.
	2030040	Transistor Socket
	2030040	Transistor Socket

**Parts List (- Side)**

Parts No.	Stock No.	Description
TR01	0300831.2	25A745A (O, Y) Transistor
TR02	0300831.2	25A745A (O, Y) Transistor
PR01	0320130	Thermistor
R01.02	0192829	8.2Ω 1/2W F.R.
R03.04	0135338	0.33Ω 5W Ce.R.
	2030040	Transistor Socket
	2030040	Transistor Socket
	2410910	2P Pin Ass'y Type E


**3-13. F-2661 Driver Circuit Board** AU-9900A (Stock No. 7571521)  
AU-11000A (Stock No. 7571561)

**Parts List**

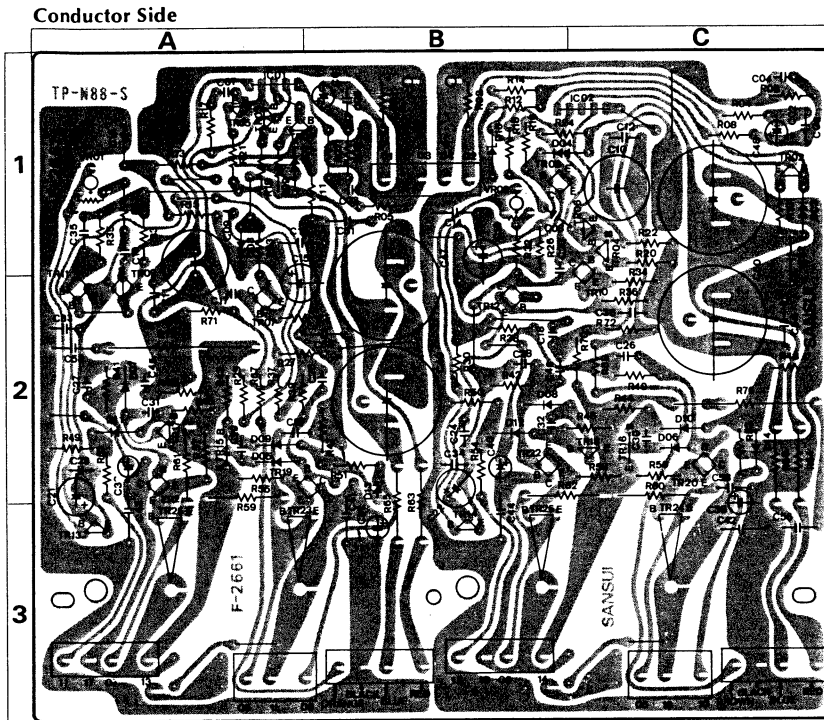

Parts No.	Stock No.	Description	Position
TR01.02	0300760.1	2SA917 (1, 2)	1 A. 1 C
TR03.04	0306290.1	2SC1400 (1) U, E	1 A. 1 C
TR05.06	0306290.1	2SC1400 (1) U, E	1 A. 1 C
TR07.08	0300770.1	2SA818 O, Y	2 A. 1 B
TR09.10	0306260.1	2SC1628 O, Y	2 A. 1, 2 C
	0306350.1	2SC1811-1 (1, 2)	
TR11.12	0306260.1	2SC1628 O, Y	Transistor
	0306350.1	2SC1811-1 (1, 2)	
TR13.14	0306401.2	2SC1904 B, V	3 A. 3 B
TR15.16	0305640.1	2SC735 O, Y	2 A. 2 C
TR17.18	0300220.1	2SA562 O, Y	2 A. 2 C
TR19.20	0306260.1	2SC1628 O, Y	2 A. 2 C
	0306350.1	2SC1811-1 (1, 2)	
TR21.22	0300770.1	2SA818 O, Y	2 A. 2 B
	0300770.1	2SA896-1 (1, 2)	
TR23.24	0308441.2	2SD382 (M, L)	3 A. 3 C
TR25.26	0303271.2	2SB537 (M, L)	3 A. 3 B
IC01.02	0360370.1	2SA798 (F, G) IC	1 A. 1 C
DO1.02	0340120	VD1212	Varistor
DO3.04	0340120	VD1212	
DO5.06	0311160	1S2473D	2 A. 2 C
	0311180	1S1588	
DO7.08	0311160	1S2473D	2 A. 2 B
	0311180	1S1588	
DO9.10	0311160	1S2473D	2 A. 2 C
	0311180	1S1588	
DI1.12	0311160	1S2473D	2 A. 2 B
	0311180	1S1588	
C13.14	0602108	0.1 $\mu$ F 100WV M.C.	1 A. 1 B
C41.42	0602108	0.1 $\mu$ F	3 B. 3 C
C43.44	0602108	0.1 $\mu$ F	3 A. 3 B
C45.46	0649002	3.9pF 50V C.C.	2 A. 2 B
C47.48	0549301	470 $\mu$ F	1, 2B, 2 C
C49.50	0549301	470 $\mu$ F	2 B. 2 C
C51.52	0602108	0.1 $\mu$ F	1 B. 1 C
C53.54	0602108	0.1 $\mu$ F	2 B. 2 C
R51.52	0191471	470 $\Omega$	2 B. 2 C
R53.54	0191471	470 $\Omega$	2 A. 2 B
R59.60	0192680	68 $\Omega$	2 A. 2 C
RE1.42	0192680	68 $\Omega$	2 A. 2B, C
RE3.44	0192680	68 $\Omega$	
RE5.46	0192680	68 $\Omega$	2, 3B, 2 C
R75.76	0203100	10 $\Omega$ 3 W N.I.R.	2 A. 2 C
VR01.02	1035050	470 $\Omega$ B	1 A. 1 B
	2410590	4P Pin Ass'y TYPE D	
	2410680	4P Pin Ass'y TYPE F	
	2410920	3P Pin Ass'y TYPE E	


**3-14. F-2629 Power Supply Circuit Board** AU-9900A (Stock No. 7502121)  
AU-11000A (Stock No. 7502161)

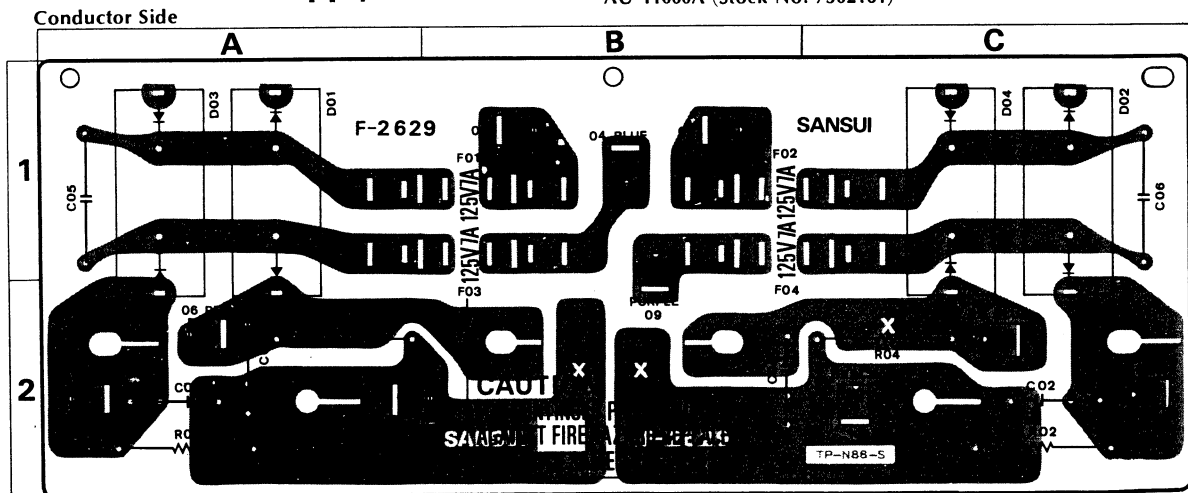

**Parts List**

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
DO1	{0311310 0311540	SS-5 S5151	1 A	DO4	{0311320 0311550	SS-5R S5151R	1 C	R01.02	0202332	3.3k $\Omega$	1 A. 1 C
DO2	{0311310 0311540	SS-5 S5151		1 C	CO1.02	0602109		1 $\mu$ F	2 A. 2 C	RO3.04	
DO3	{0311320 0311550	SS-5R S5151R	1 A	CO3.04	0602109	1 $\mu$ F	2 A. 2 B	FO1-04	0432500	AC Fuse 7A 125V	1, 2 B
				CO5.06	0605477	0.047 $\mu$ F	1 A. 1 C				

**3-15. F-2630 Power Supply Circuit Board for Driver Stage** AU-9900A (Stock No. 7502111)  
 AU-11000A (Stock No. 7502151)  
**Conductor Side**

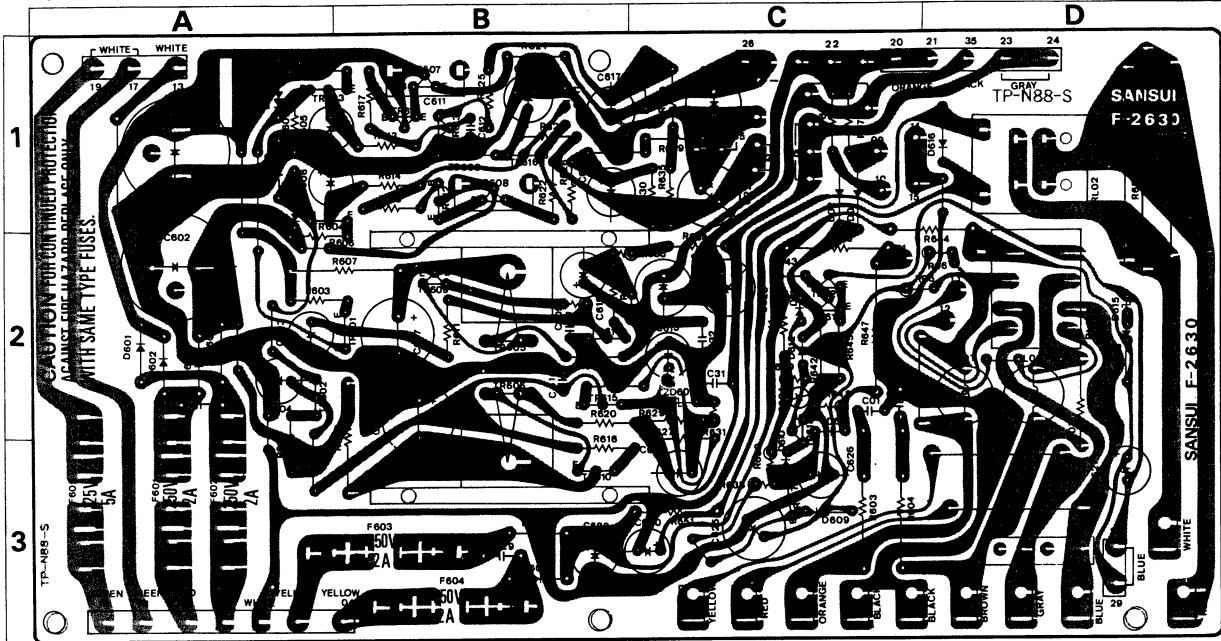


**Parts List**

Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position	Parts No.	Stock No.	Description	Position
TR001	0300721.2	2SA850 (D, E)	1 A, B	D003	0310350	10D2	2 A	R01.02	0104479	4.7Ω 1W C.R.	2 C, 2 D
TR002	0306281.2	2SC1735 (D, E)		D004	0310350	10D2	2 A	R03.04	0203100	10Ω 3W N.I.R.	3 C
TR003	0300720.1	2SA850 (C, D)	1 A, B	D005	0310340	10D1	3 B	R09.10	0135221	220Ω 5W Ce.R.	
TR004	0306280.1	2SC1735 (C, D)		D006	0310340	10D1	3 B	R03-606	0191471	470Ω 1/4W F.R.	1 A, 2 A
TR005	0308441.2	2SD382 (L, M)	1 B	D007	0340120	VD1212	1 A	R07.608	0202151	150Ω 2W N.I.R.	
TR006	0303271.2	2SB537 (L, M)		D008	0340120	VD1212	1 A	R07-622	0191100	10Ω 1/4W F.R.	1 B
TR007	0308450.1	2SD356 (C, D)	1 B	D009	0310490	SV-02	3 C	R44	0211471	470Ω 1W N.I.R.	2 C, D
	0308611.2	2SD357 (D, E)		D10	0311160	1S2473D	3 C	R46	0202151	150Ω 2W N.I.R.	2 C
TR008	0303441.2	2SB527 (D, E)	1 B	D11	0311180	1S1588	2 C	R47	0183471	470Ω 3W Ce.R.	2 C
	0303280.1	2SB526 (C, D)		D12	0311160	1S2473D	2 C	R51	0211391	390Ω 1W N.I.R.	3 C
TR009	0306281.2	2SC1735 (D, E)	1 B	D13	0310340	10D1	2 D	R52.653	0137829	8.2Ω 7W Ce.R.	1 D
TR010	0300470.1	2SA726 (F, G)		D14	0311160	1S2473D	2 C	L01.02	4210290	Filter Coil 1.5mH	2 D
TR011	0306280.1	2SC1735 (C, D)	1 B	D17-619	0310340	10D1	1 D	RL01	1150370	Relay	2 D
TR012	0300720.1	2SA850 (C, D)	1 B					RL02	1150360	Relay	1 D
TR013	0306290.1	2SC1400 (E, U)	1 B	D601	0316320	RD-13E (C)	1 B	F01.604	0432240	2A 250V A.C. Fuse	3 A, B
TR014	0306290.1	2SC1400 (E, U)		D602	0316310	RD-13E (B)	1 B				
TR015	0300470.1	2SA726 (F, G)	1 B	C01	0549301	470(F)	1 A	<b>AU-9900A Only</b>			
TR016	0300470.1	2SA726 (F, G)	1 B	C02	0549301	470(F)	1, 2 A	R13.614	0107822	8.2kΩ	
TR017	0300511.2	2SA733 (Q, R)	3 C	C02	0549301	470(F)	80V E.C.	R17.618	0107221	220Ω	1/4W C.R.
TR018	0306131.2	2SC1364 (6, 7)	2, 3 C	C01, 612	0655472	4700 pF		R30	0107393	39kΩ	
TR019	0306131.2	2SC1364 (6, 7)	2 C	C28	0655103	10000 pF	500V C.C.	<b>AU-11000A Only</b>			
TR020	0306131.2	2SC1364 (6, 7)	2 C	C29	0655472	4700 pF		R13.614	0210822	8.2kΩ	1/4W M.R.
D01.02	0311160	1S2473D	1 C					R17.618	0102221	220Ω	1/4W M.R.
D01	0311180	1S1588	1 C					R30	0107123	12kΩ	1/4W C.R.
D601	0310350	10D2	2 A								
D602	0310350	10D2	2 A								


**● Figures**  
**Connectors & Pin Ass'y**

**Connectors**

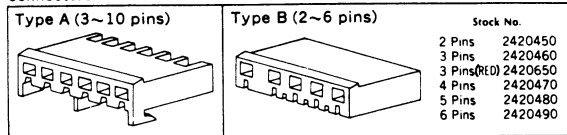

NOTE: Since stock number of female connectors (type B) with wires are not shown in each parts list of Complete circuit board, please refer to the above parts list when ordering the connector.

**Pin Ass'y**

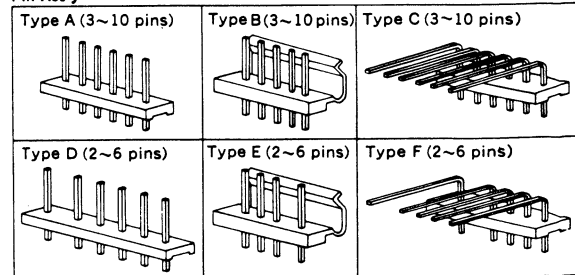


**Abbreviations**


<b>C.R.</b> : Carbon Resistor	<b>N.I.R.</b> : Non-Inflammable Resistor	<b>C.C.</b> : Ceramic Capacitor
<b>S.R.</b> : Solid Resistor	<b>M.C.</b> : Mylar Capacitor	<b>M.I.C.</b> : Mica Capacitor
<b>Ce.R.</b> : Cement Resistor	<b>E.C.</b> : Electrolytic Capacitor	<b>O.C.</b> : Oil Capacitor
<b>M.R.</b> : Metallized Film Resistor	<b>BP.E.C.</b> : Bi-Polar Electrolytic Capacitor	<b>P.C.</b> : Polystyrene Capacitor
<b>F.R.</b> : Fusing Resistor		<b>T.C.</b> : Tantalum Capacitor

## 4. OTHER PARTS/4-1. Top & Bottom View

Top View

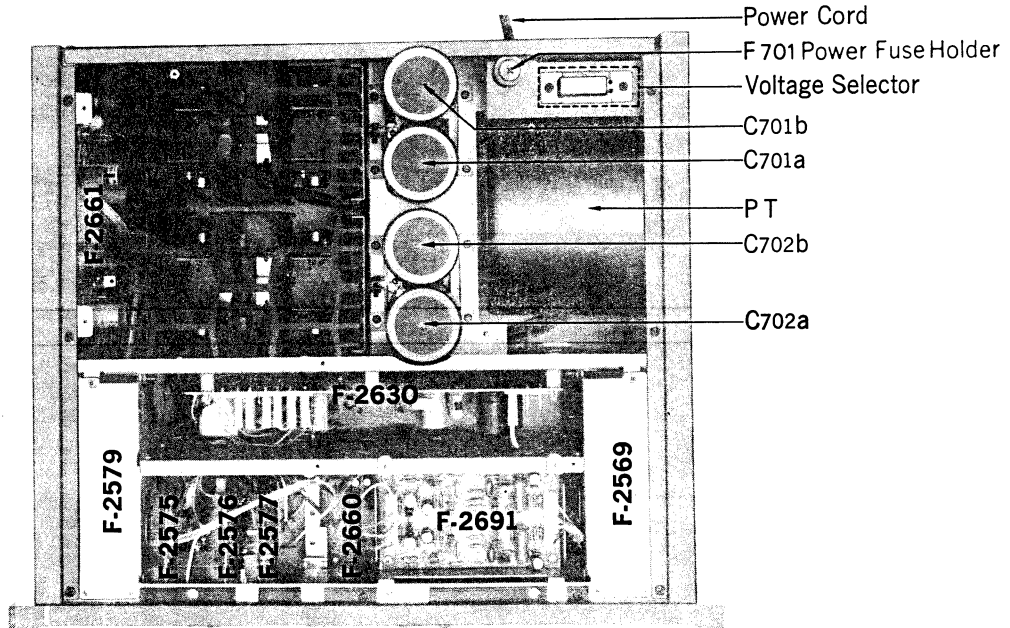

Bottom View

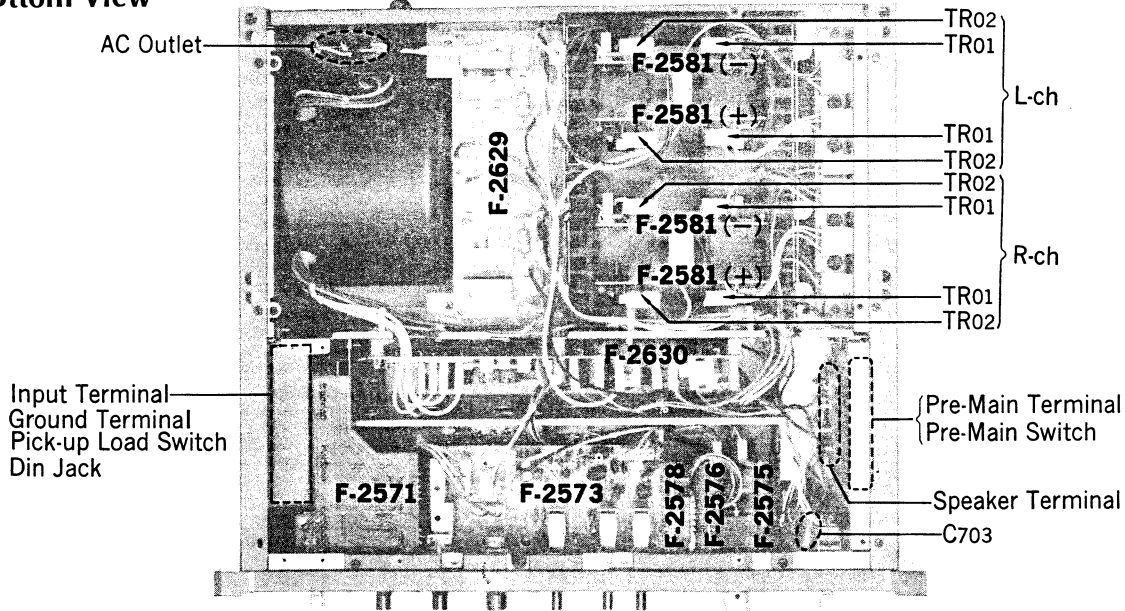


**Parts List**

Parts No.	Stock No.	Description
F-2581 (+ Side)		
TR01.02	0306451.2	2SC1403A
F-2581 (- Side)		Power Transistor
TR01.02	0300831.2	
C701.702	0559513	6800µF × 2 63WV E.C. (AU-9900A)
C701.702	0559514	10000µF × 2 63WV E.C. (AU-11000A)
C703	0659801	0.01µF 150V C.C.
F701	0432290	5A (220V/240V)
	0434060	10A (100V/120V)
	2300060	Power Fuse Holder
	3300240	Power Cord
	2290150	Ground Terminal
	2090030	Din Jack

Parts No.	Stock No.	Description
	1110310	Pik-UP Load Switch
	1110310	Sensitivity Switch
	1110320	Pre-Main Switch
	2430260	Pre-Main Terminal (white)
	2430270	Pre-Main Terminal (red)
	2290160	Speaker Terminal
	2450060	AC Outlet
	2430260	Input Terminal (white)
	2430270	Input Terminal (red)
	2410091	Voltage Selector Plug
	2410830	Voltage Selector Socket
	4002560	Power Transformer (AU-9900A)
	4002570	Power Transformer (AU-11000A)

### 4-2. Exploded View

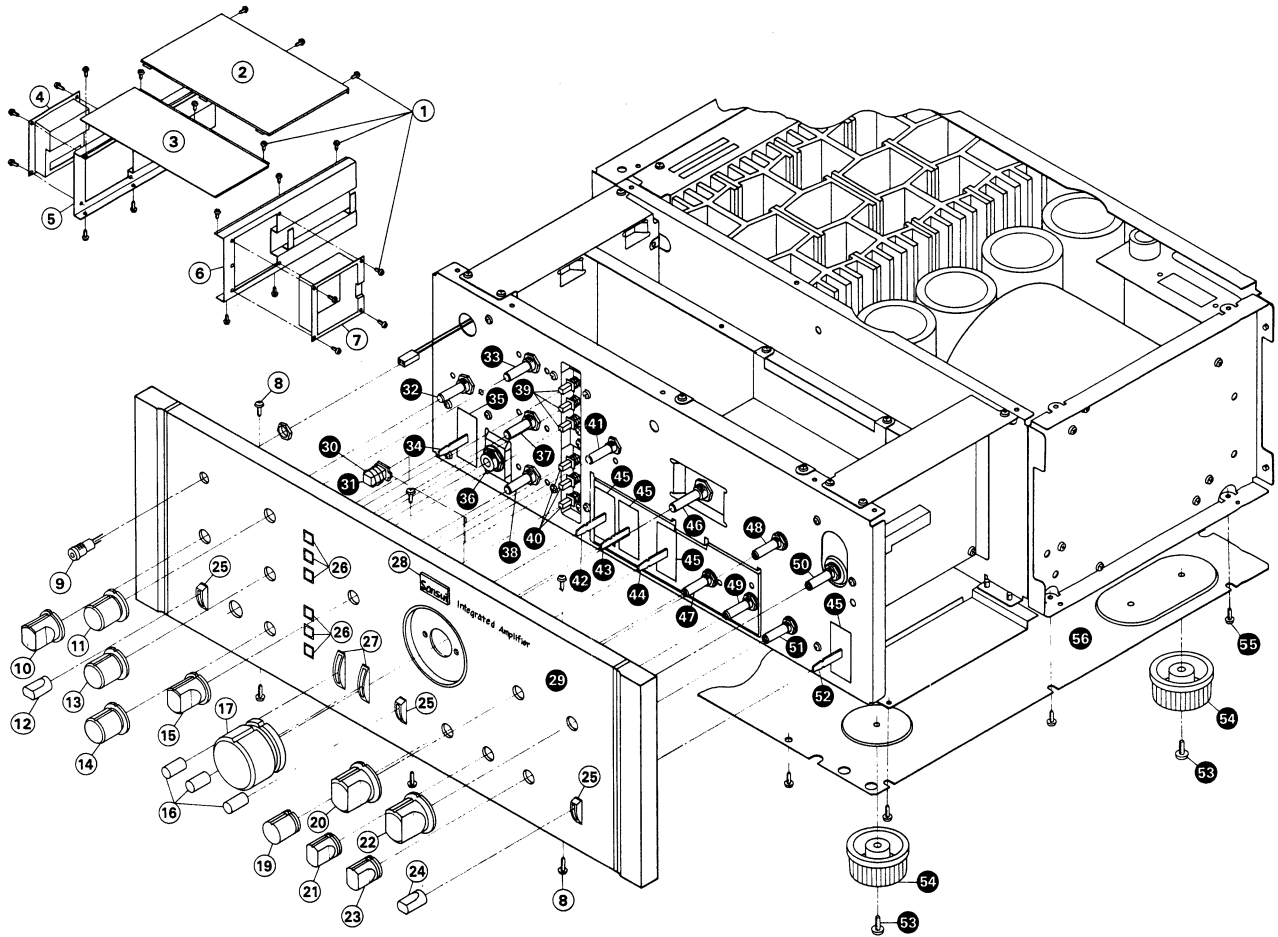

#### Parts List

Parts No.	Stock No.	Description	Parts No.	Stock No.	Description
2	5006660	Bonnet (A)	30	6906480	Spring, Push Knob
3	5006521	Bonnet (B)	31	5326531	Push Knob
4	5288640	Output Terminal Base	32	1101700, 1	Rotary Switch, Speakers Switch
5	5304081	Side Bonnet L-CH	33	1090150, 1	50k $\Omega$ $\times$ 2, Trable Volume
6	5304091	Side Bonnet R-CH	34	1170510	Lever Switch, Power
7	5287411	Input Terminal Base	35	5047470	Masking, Lever Switch
9	7726140	LED Ass'y, Protector Indicator	36	2430190	Headphone Jack
10	5318262	C-6 Type Knob, Speaker Switch	37	1090150, 1	50k $\Omega$ $\times$ 2, Midrange Volume
11	5318253	B-6 Type Knob, Treble Volume	38	1090150, 1	50k $\Omega$ $\times$ 2, Bass Volume
12	5326510	E-2 Type Knob, Power Switch	39	1131150	Push Switch, Tone Selector (Treble)
13	5318253	B-6 Type Knob, Midrange Volume	40	1131140	Push Switch, Tone Selector (Bass)
14	5318253	B-6 Type Knob, Bass Volume	41	1190290	Tone & Filter Switch
15	5318262	C-6 Type Knob, Tone & Filter Switch	42	1170950	Low Filter Switch
16	5326520	E-3 Type Knob, Filter & Muting Switch	43	1170950	High Filter Switch
17	5318800	G-7 Type Knob, Volume	44	1170770	Lever Switch, Muting
19	5318271	D-6 Type Knob, Balance Bolume	45	5047821	Masking, Lever Switch
20	5318371	H-6 Type Knob, Tape Play Switch	46	1090220	100k $\Omega$ $\times$ 4, Volume
21	5318281	F-6 Type Knob, Mode Switch	47	1015170, 1	250k $\Omega$ , Balance Volume
22	5318371	H-6 Type Knob, Input Selector	48	1190270	Tape Play Switch
23	5318281	F-6 Type Knob, Tape Copy Switch	49	1190250	Mode Switch
24	5326510	E-2 Type Knob, Tuner Switch	50	1190260	Input Selector
25	5286731	Lever Guide (1)	51	1190280	Tape Copy Switch
26	5286721	Knob Guide	52	1170870	Lever Switch, Tuner
27	5286741	Lever Guide (2)	54	5517050	Leg
28	5336581	Sansui Mark	56	5058492	Bottom Plate
29	{7007482 7007472}	Panel Ass'y (AU-9900A) Panel Ass'y (AU-11000A)			

## 5. ADJUSTMENTS



### 5-1. Bias Current Adjustment (See Fig. 5-1, 5-2)

**Condition:**

- |  |  |
|--|--|
| 1. Room Temperature . . . . .18°C~28°C (65°F~83°F)                             | 5. Level Volume . . . . .Maximum   |
| 2. Output Load (Speaker) . . . . .8 ohms                                       | 6. For this adjustment, run this unit for more than 3 minutes after turning on the power switch. |
| 3. A.C. Supply Voltage . . . . .Rated Voltage ±2%                              |  |
| 4. Turn down the volumes, VR01, VR02 on F-2661 till minimum (counterclockwise) |  |


STEP	SUBJECTS	AUDIO OSCILLATOR		OUTPUT TERMINAL	ADJUST	ADJUST FOR	REMARKS
		OUTPUT	CONNECTING POINT				
1	Distortion factors & Switching distortion adjustment	At 50kHz, Set the amplifier-output to 15V on both Channels by adjusting O.S.C. output level	Input terminal of amplifier	Speaker terminal 8Ω Oscilloscope Distortion Meter VTVM	VR01 (L-CH) VR02 (R-CH) on F-2661	Minimum point of Distortion factors & Switching distortion	To avoid temperature rise, complete the adjustment in a short time
2	Bias Current confirmation (no input signal)			Refer to D.C. Milliammeter Fig. 5-1	VR01 (L-CH) VR02 (R-CH) on F-2661	Confirm bias current to be within 50mA	Only being it over 50mA, Set it to 50mA Volume minimum

**Note:** After proceeding with Step 1, have a cooling off period, 5 to 10 minutes, to confirm the bias current. In case of not having a distortion meter, complete the adjustment by step 2 to obtain bias current 50mA.

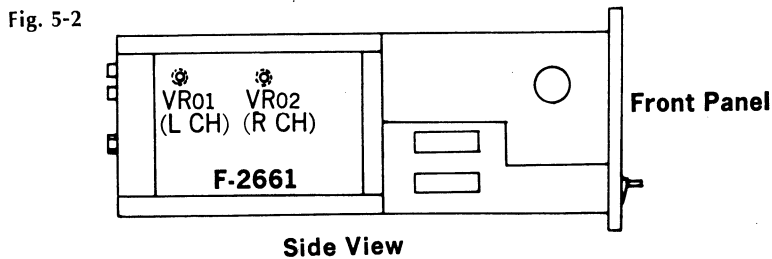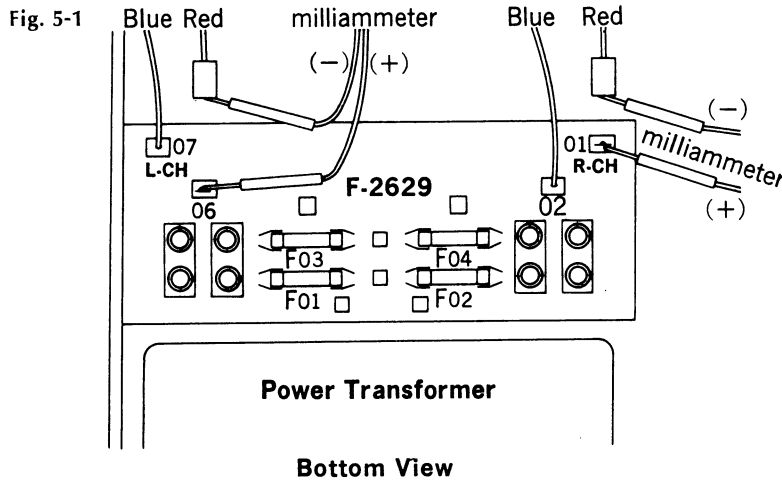


\* La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.  
 \* Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.  
 \* Design and specifications subject to change without notice for improvements.

### 6. SCHEMATIC DIAGRAM/6-1 AU-9900A/11000A Pre AMP. Section

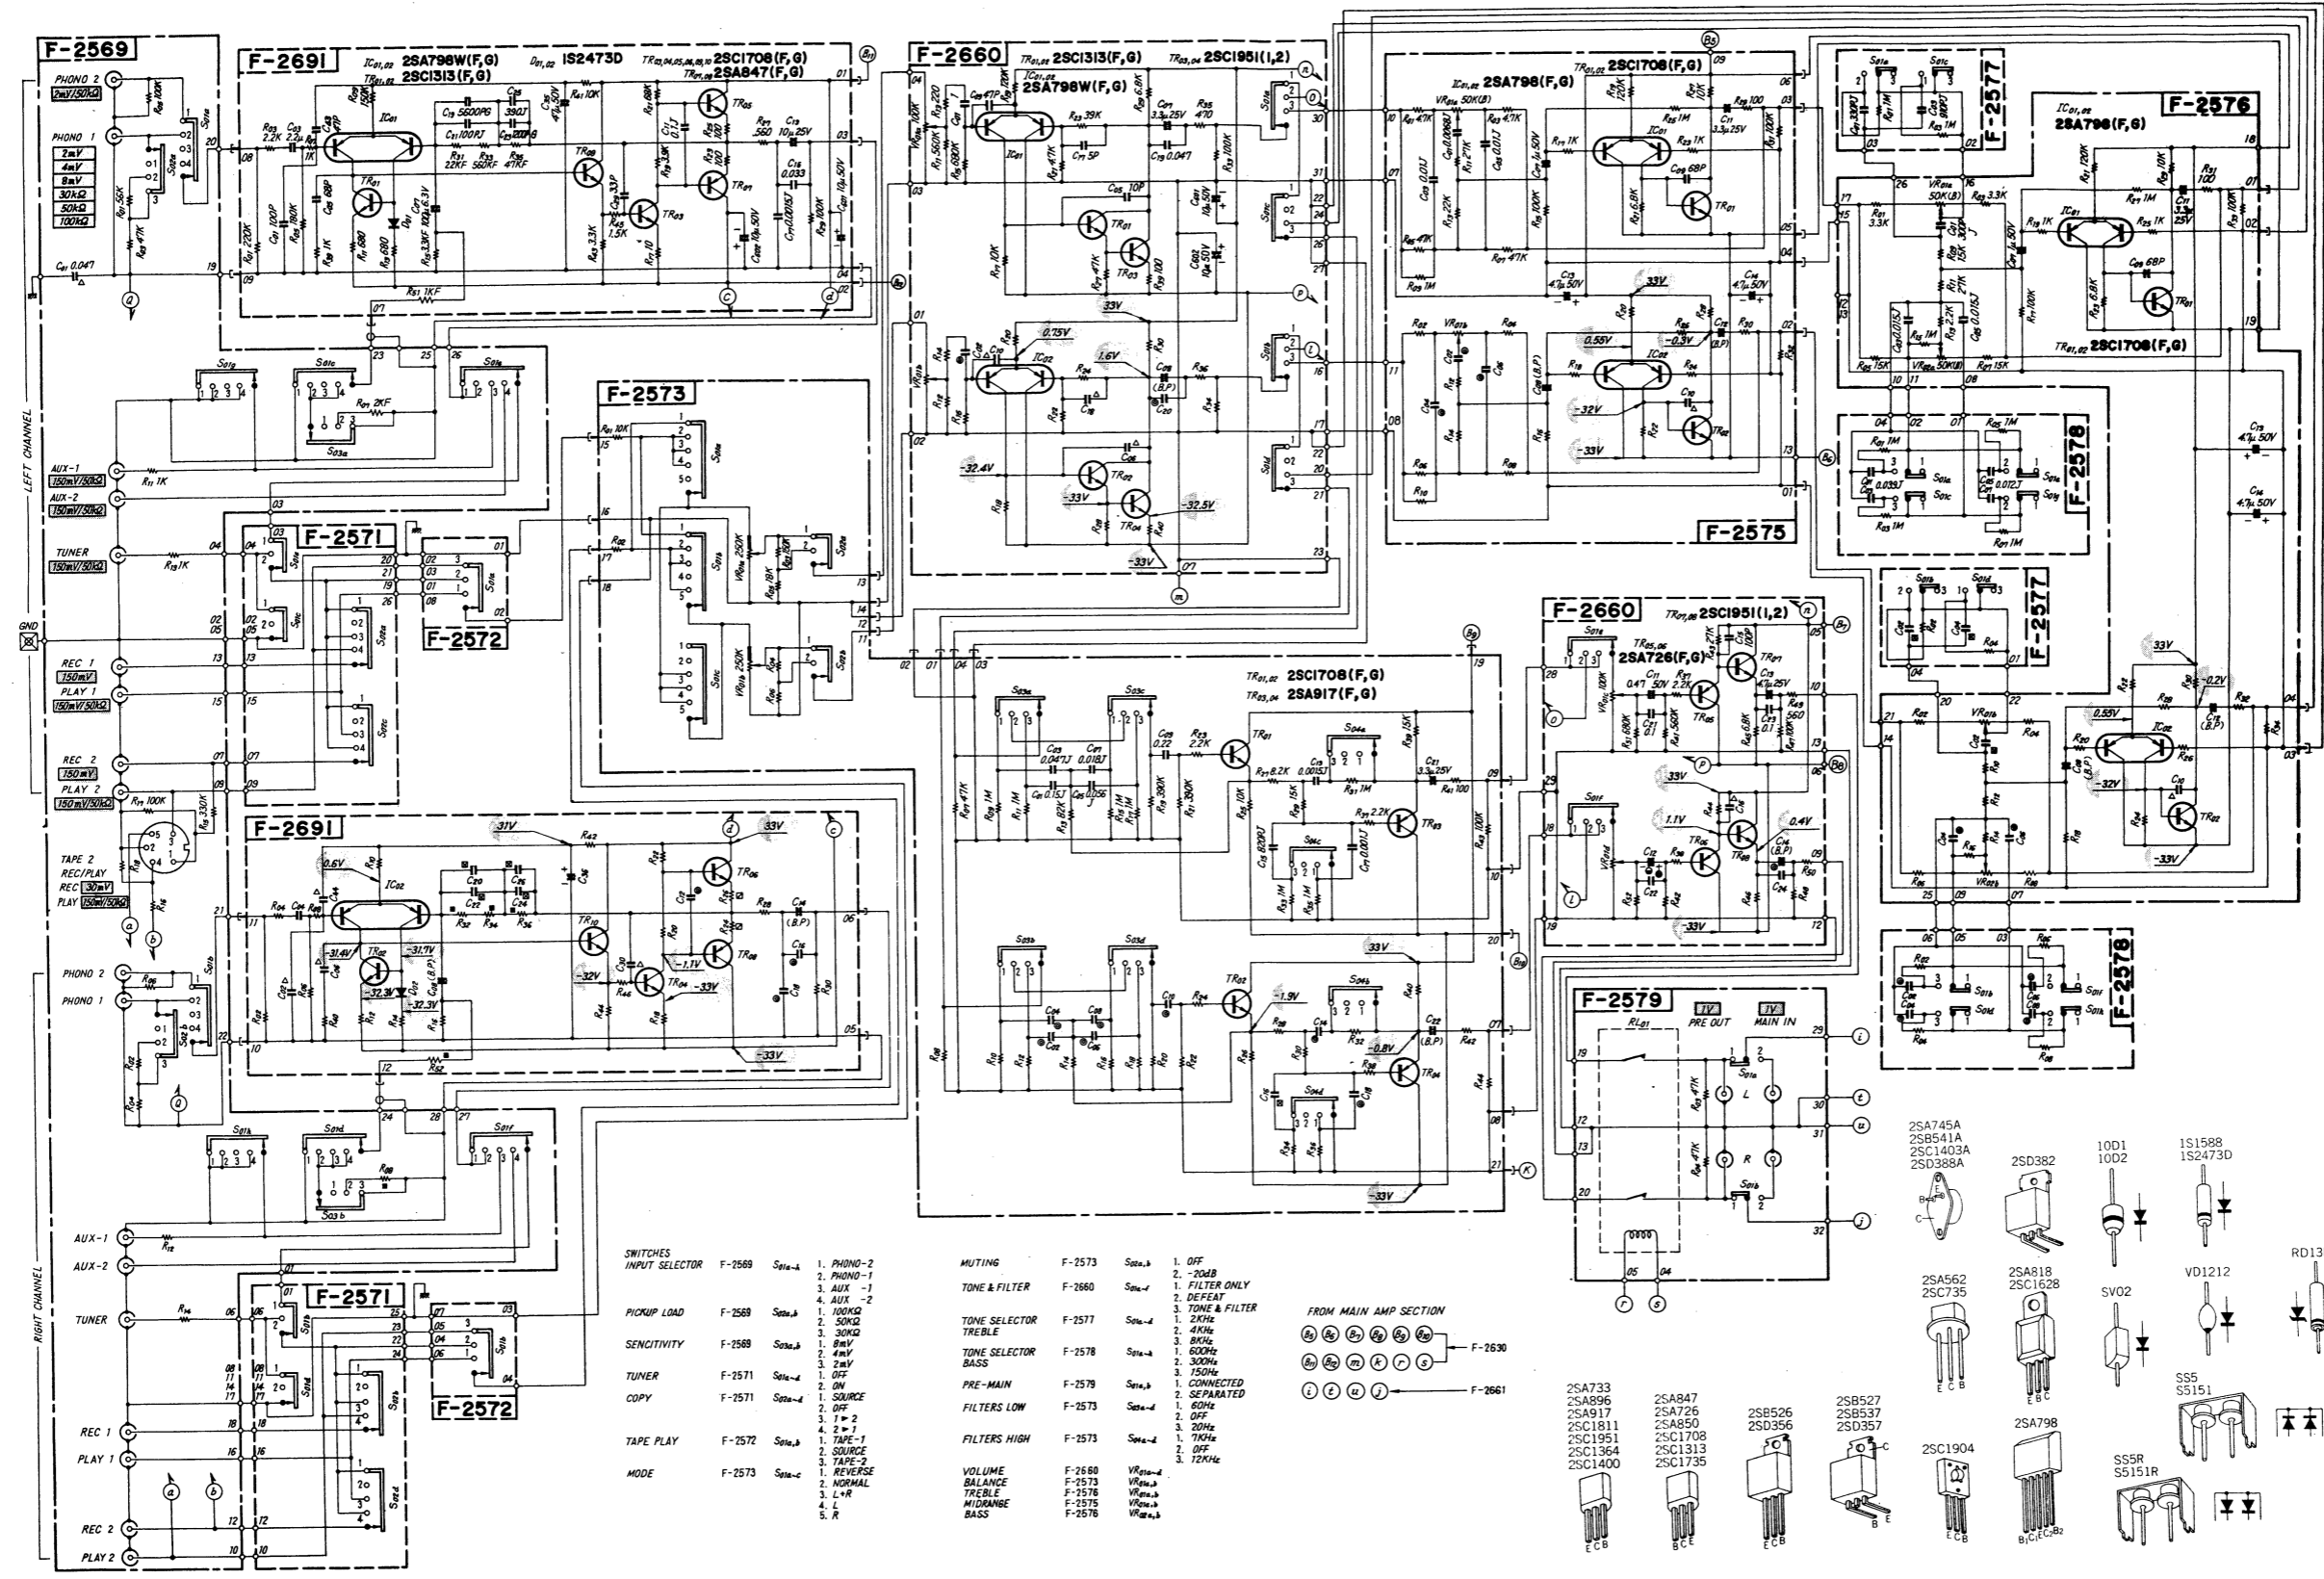


• La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.  
 • Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.  
 • Design and specifications subject to change without notice for improvements.

6-2. AU-9900A Power AMP. Section

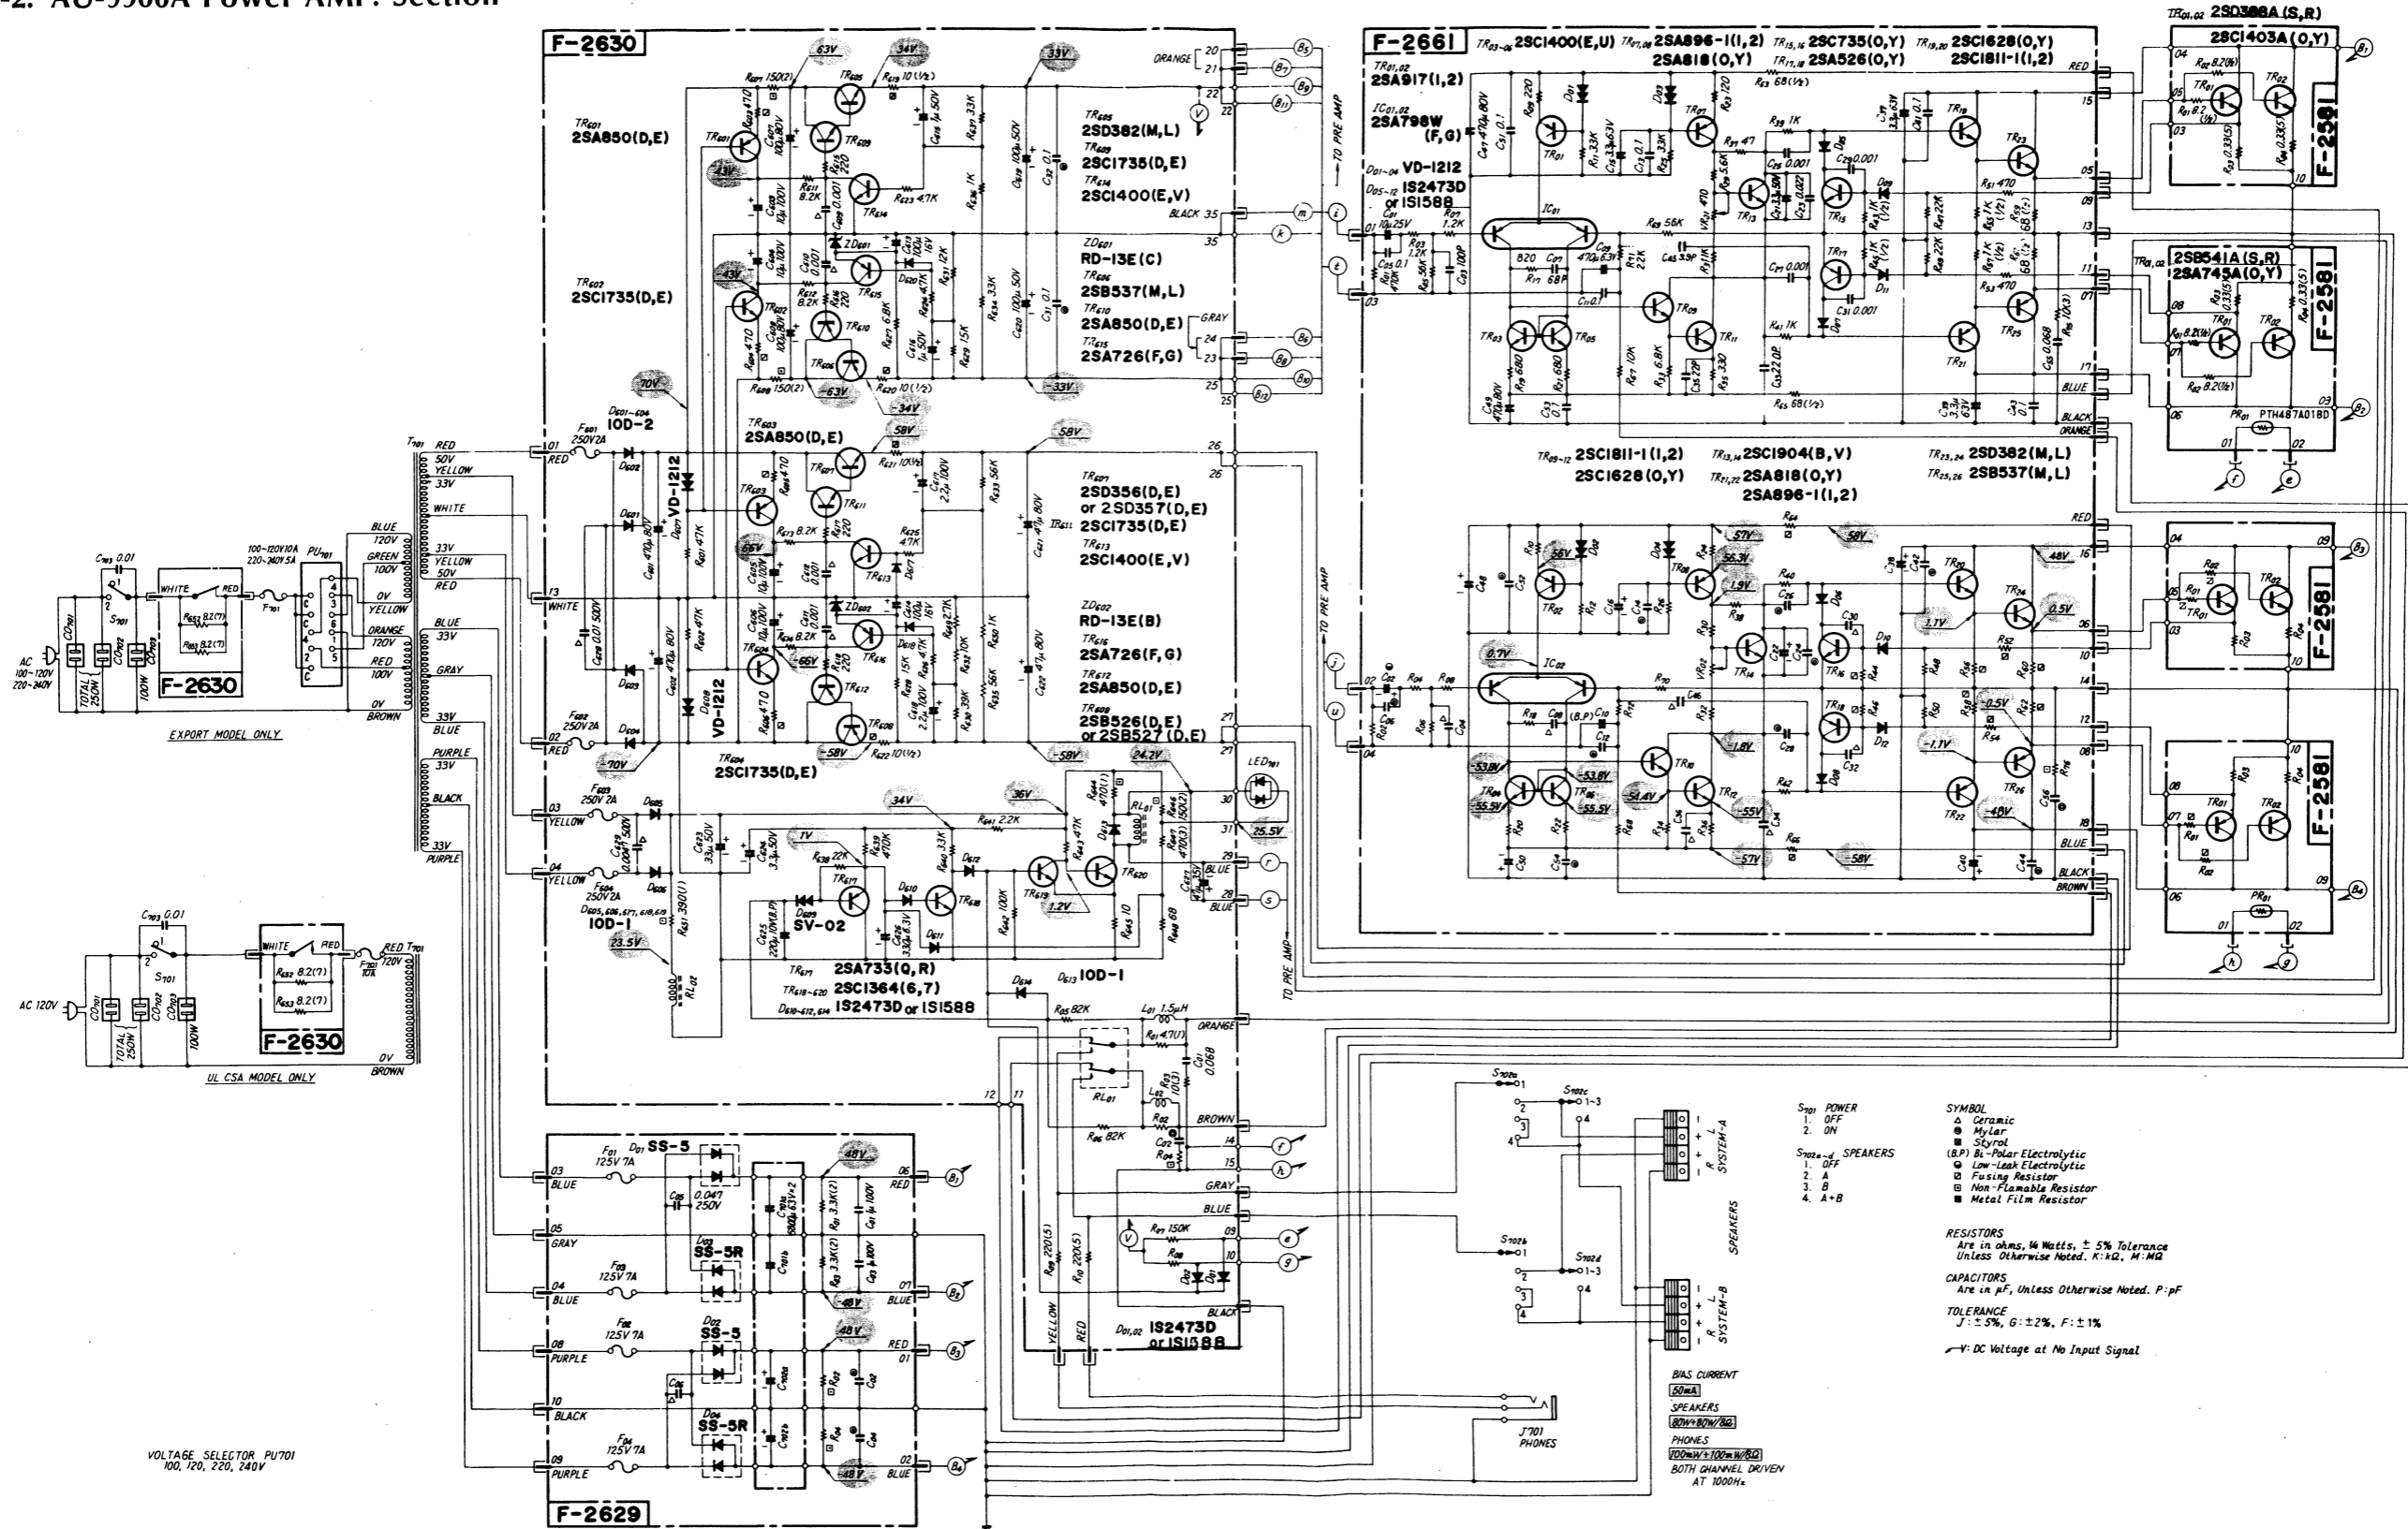


• La présentation et les spécifications sont susceptibles d'être modifiées sans préavis par suites d'améliorations éventuelles.  
 • Änderungen, die dem technischen Fortschritt dienen, bleiben vorbehalten.  
 • Design and specifications subject to change without notice for improvements.

6-3. AU-11000A Power AMP. Section

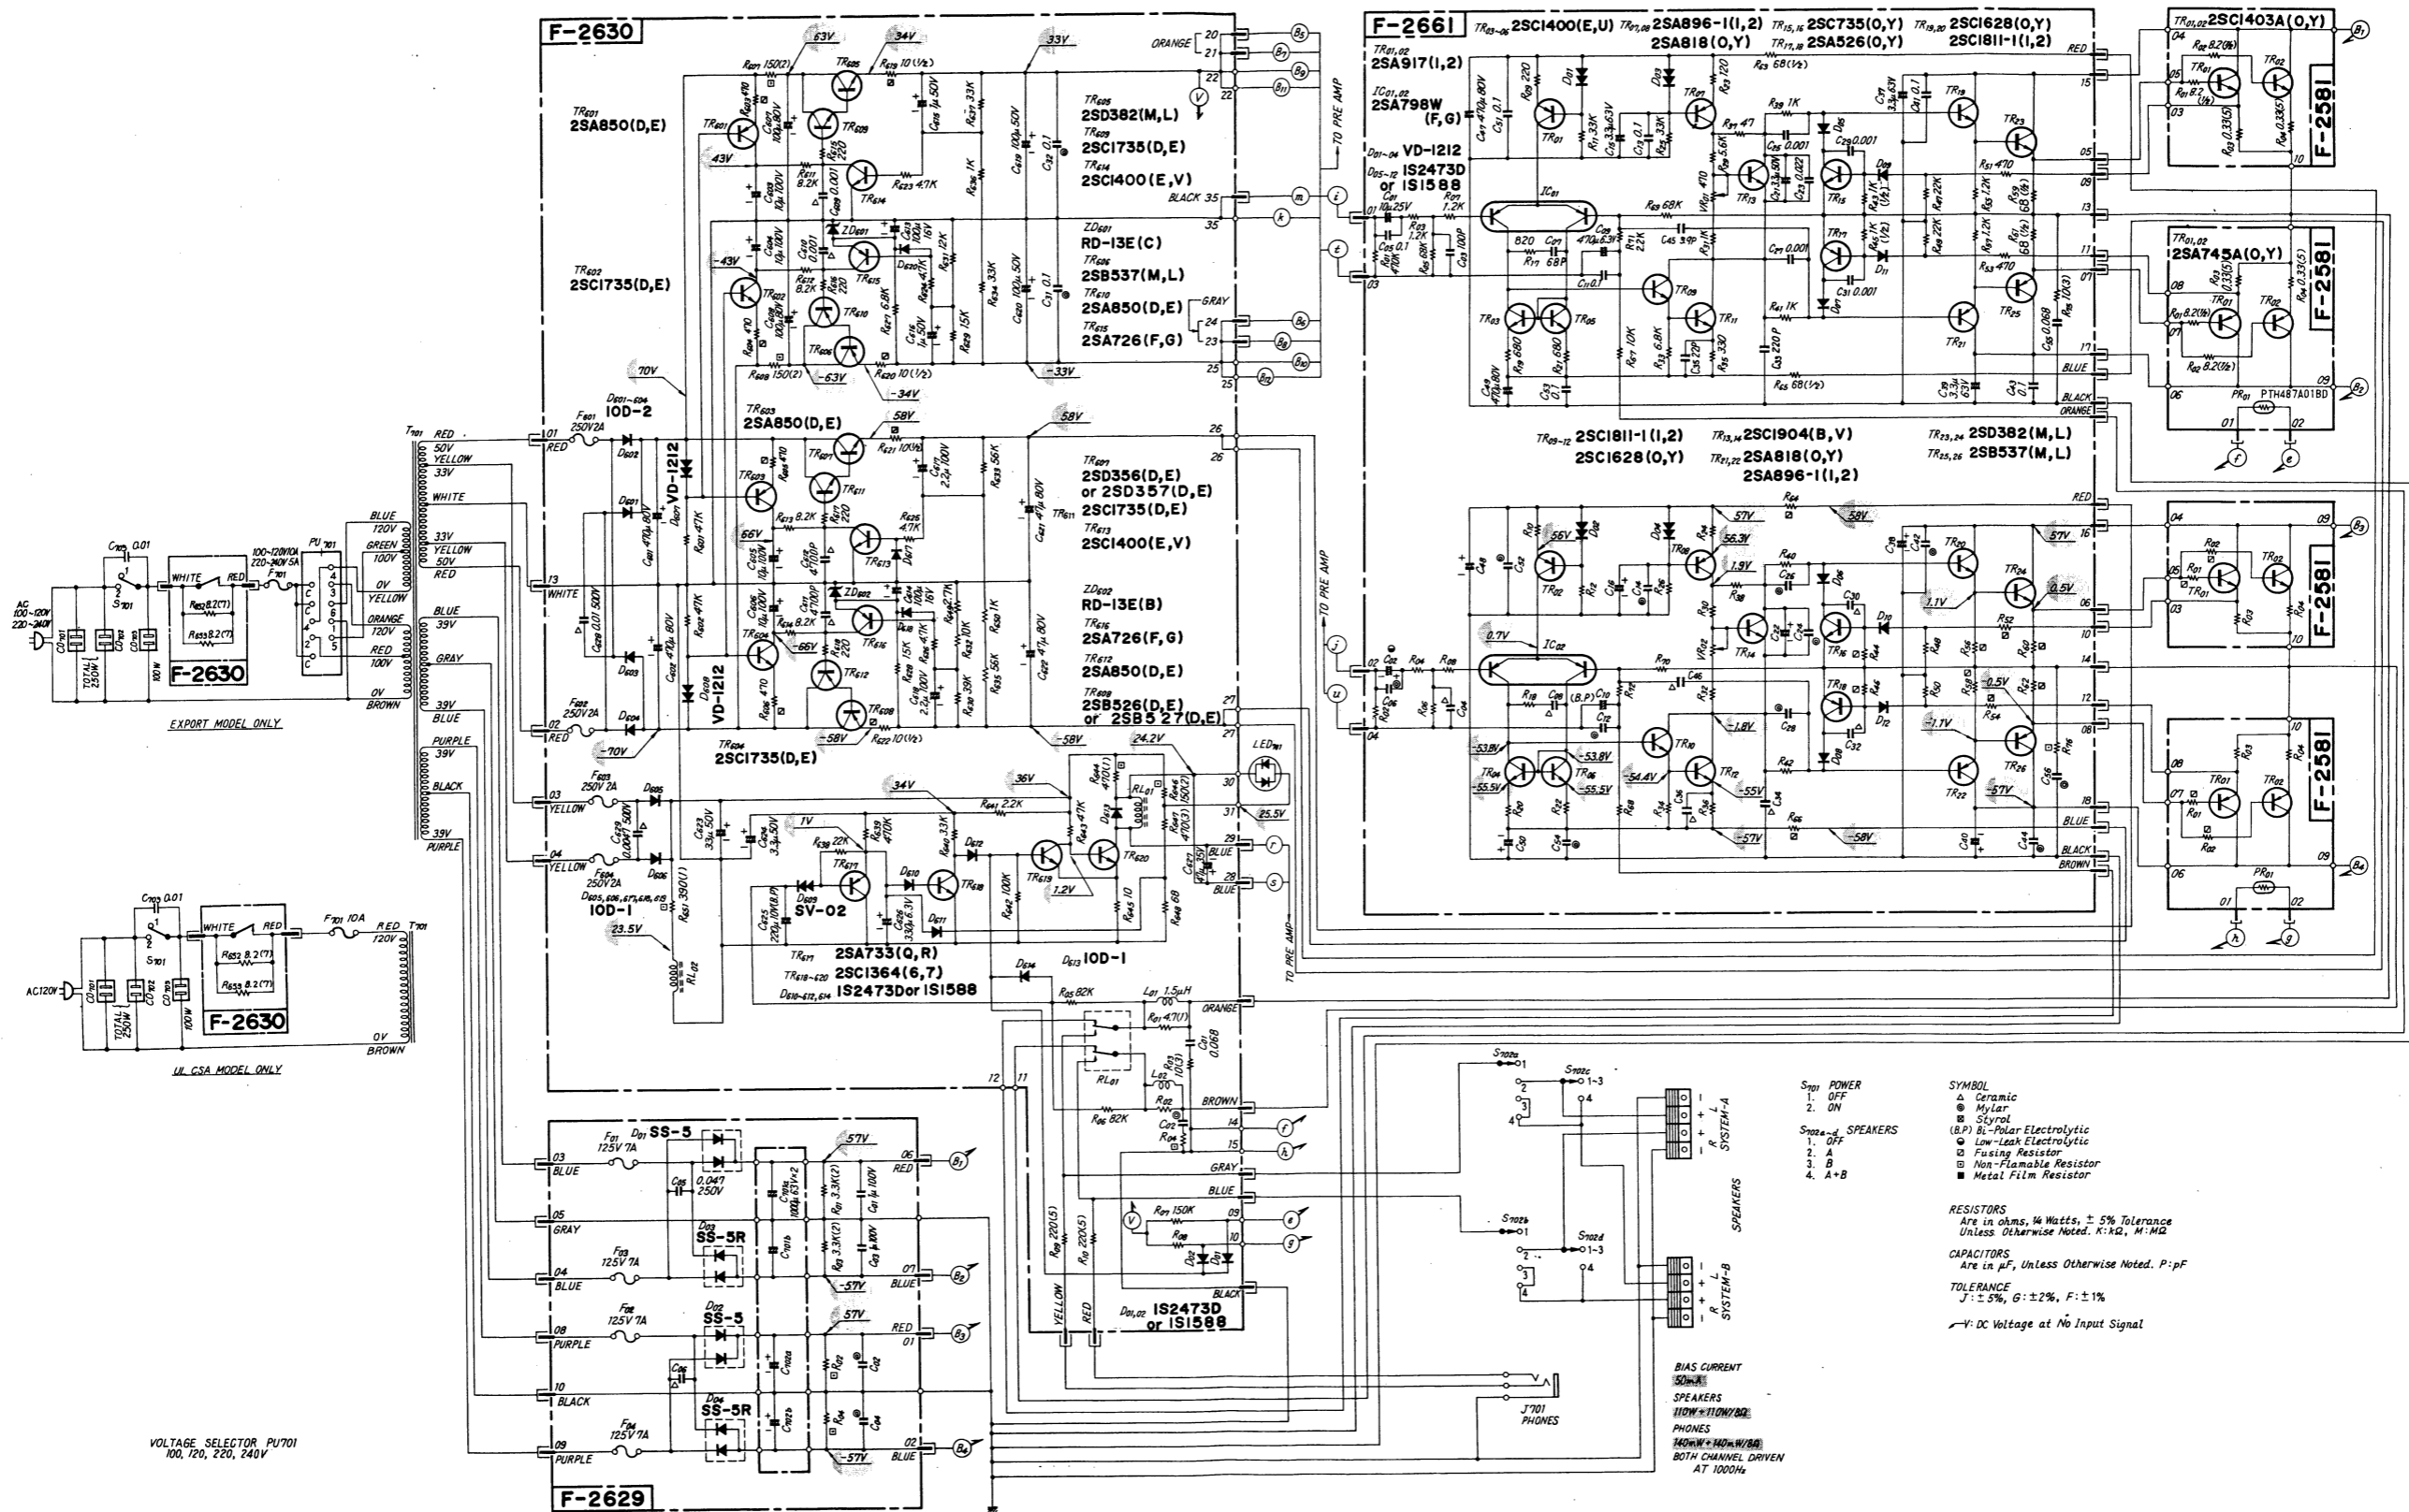


### 6-4. AU-9900A Power Supply Section

EU. BS MODEL ONLY

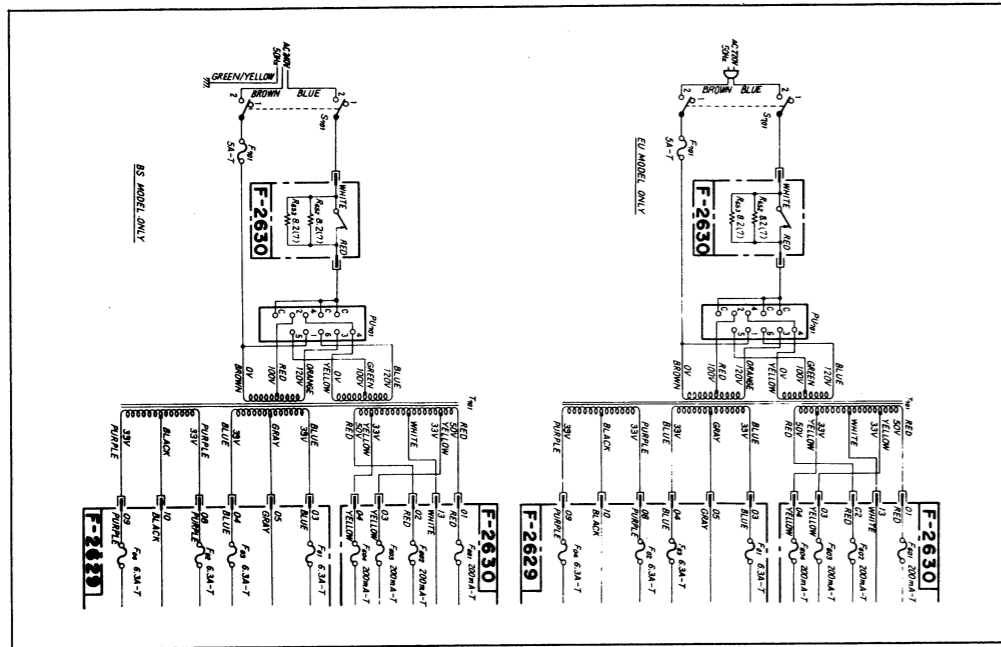

### 6-5. AU-11000A Power Supply Section

EU. BS MODEL ONLY

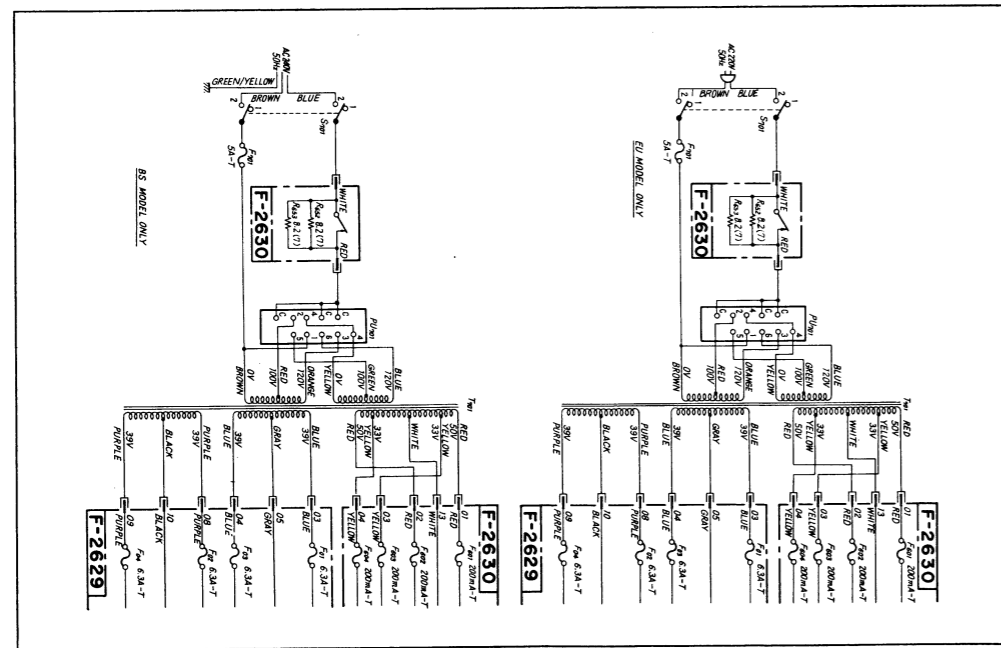

## 7. PACKING LIST

Parts No.	Stock No.	Description
1	9116051	Vinyl Cover
2	9027911	Styroform Packing
3	9009350	Carton Case (AU-9900A)
	9009340	Carton Case (AU-11000A)
4	5996080	Curl Stopper

## 8. ACCESSORY PARTS LIST

Stock No.	Description
9237500	Schematic Diagram (AU-9900A)
9237490	Schematic Diagram (AU-11000A)
9202440	Operating Instruction (AU-9900A)
9202450	Operating Instruction (AU-11000A)

